

Fellowes®


1789 Norwood Avenue Itasca, Illinois 60143-1095
630-893-1600 Customer Service: 1-800-945-4545
<http://www.fellowes.com>

HELP LINE

Australia	+ 1-800-33-11-77
Canada	+ 1-800-665-4339
México	+ 1-800-234-1185
United States	+ 1-800-955-0959

FELLOWES

Australia	+ 61-3-8336-9700
Benelux	+ 31-(0)-76-523-2090
Canada	+ 1-905-475-6320
Deutschland	+ 49-(0)-5131-49770
France	+ 33-(0)-1-30-06-86-80
Italia	+ 39-(0)-71-730041
Japan	+ 81-(0)-3-5496-2401
Korea	+ 82-(0)-2-3462-2884
Malaysia	+ 60-(0)-35122-1231
Polska	+48-(22)-771-47-40
Spain	+34-91-748-05-01
Singapore	+ 65-6221-3811
United Kingdom	+ 44-(0)-1302-836836
United States	+ 1-630-893-1600

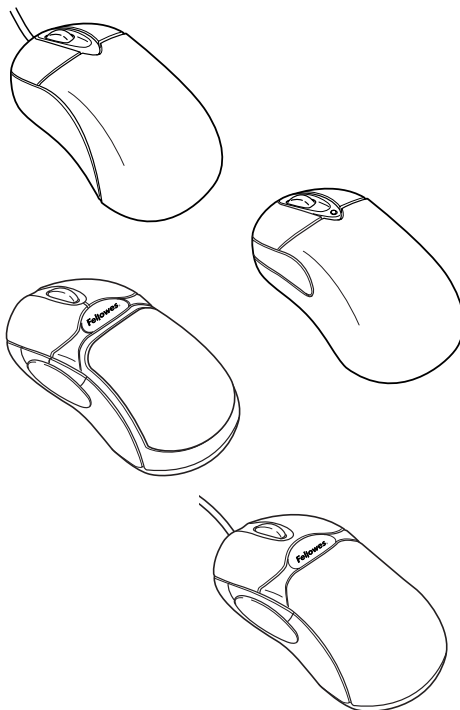

To learn more about Fellowes technology and support, visit us at www.fellowes.com.

PRIOR TO USING A CORDLESS MOUSE, YOU MUST ESTABLISH A CONNECTION BETWEEN THE MOUSE AND THE RECEIVER.

See Section 4-A for instructions on how to establish a connection between the mouse and receiver.

TABLE OF CONTENTS

PG#

1. Introduction	3
2. Features	3
3. Getting Started	5
A. Installing the Software	5
B. Connecting to the USB or PS/2 Port	6
C. Installing the Batteries (Cordless Mice)	6
4. Operation	7
A. Establishing Connection Between the Mouse and Receiver (Cordless Mice)	7
5. Fellowes EasyPoint Software	7
6. Troubleshooting	8
7. Fellowes Technical Support	9
8. Software License Agreement	10
9. FCC Notice	11
10. Battery Information	12
11. Disclaimer	13
12. Limited Warranty	14

1 INTRODUCTION

Thank you for purchasing this Fellowes mouse. To ensure your new mouse functions properly, please read these instructions before you install the device.

All of our Optical Series mice incorporate a revolutionary consumer-designed shape for enhanced comfort and control.

System Requirements:


- PC-compatible computer with an available USB port
- Windows® 95 (PS/2 model only)/98SE/2000/ME/XP
- CD-ROM drive

Package Contents

- One (1) Fellowes Optical Mouse
- One (1) Owner's Manual
- One (1) Software Installation CD
- Two AA or AAA Batteries (depending on model)
- RF Receiver (cordless models only)



2 FEATURES

- 2.1 3 Standard Programmable Buttons
- 2.2 2 Additional Programmable Buttons (on 5-B models only)
- 2.3 Scroll Wheel
- 2.4 Low Battery Indicator (Red LED)—Glows/Blinks when batteries are low (cordless models only)
- 2.5 USB or PS/2 Cable—connect to PC or hub (corded models only)

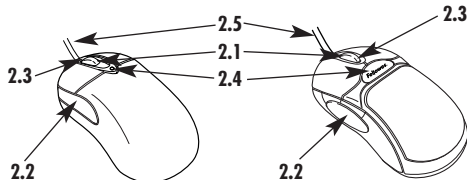


On Mouse Bottom:

- 2.6 Optical Sensor
- 2.7 Battery Compartment—
for two AA or AAA
(depending on model)
batteries (cordless
models only)
- 2.8 Channel Change Button
(cordless models only)
- 2.9 On/Off Switch (select
cordless models only)

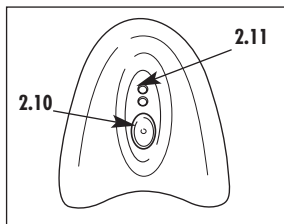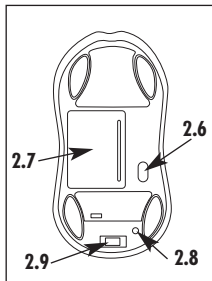

*Receiver Front
(Select Models Only)*

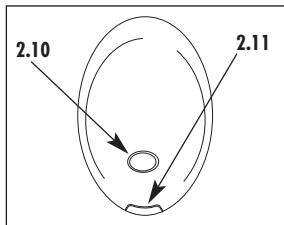

*Receiver Front
(Select Models Only)*

On Receiver:


- 2.10 Channel Search Button—used to match mouse and receiver
- 2.11 Index LED—indicates channel search status

3 GETTING STARTED


A. Installing the Software:

1. Un-install or remove the current mouse driver. Before installing the Fellowes EasyPoint Software, we recommend removing any 3rd party mouse software programs as they may cause conflict. Please contact the other software manufacturer for assistance with the removal of their program.
2. Remember to save your Fellowes EasyPoint CD in case you ever need to reinstall the software.
3. The device will work as a basic mouse as soon as you plug it in, but to make full use of the device, you must install the Fellowes software.
4. Insert the Fellowes EasyPoint CD into your CD/DVD drive. The Fellowes EasyPoint software CD is programmed to Auto Run. However, if this function is disabled in your computer, please follow steps 5 and 6 below.
5. Choose the **"Start"** menu (Ctrl & Esc) and select **"Run."**
6. Type [drive]: SETUP in the command line box and press Enter to select OK.
7. Follow the on screen prompts to complete installation.
8. When the installation is complete, the standard option is to restart your computer.

B. Connecting to the USB or PS/2 Port:

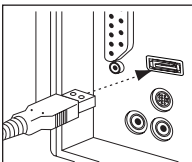

USB: (Windows 98SE or above required) Connect the cable to the USB port on the computer (or a USB port on a hub connected to your computer). USB installation does not require you to power off your computer.

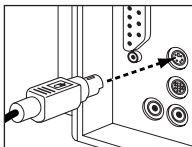

PS/2 (for applicable models): PS/2 is not the preferred connection method; USB offers more functionality and control as compared to PS/2.

- Turn off the power to your computer
- Attach the PS/2 connector to the USB plug and connect the 6-pin connector to the PS/2 port.
- Turn on the power to your computer.

C. Installing the Batteries (Cordless models only):

Whenever new batteries are inserted, make sure both are fresh AA or AAA (depending on model) batteries.

- Remove the battery compartment cover on the bottom of the mouse.
- Insert two AAA (or AA) batteries into the battery compartment, making sure to properly orient the positive (+) and negative (-) ends as indicated in the battery compartment.
- Reinstall the battery compartment cover.
- Make sure the On/Off switch on the bottom of the mouse is turned to the "On" position (select models only).

4 OPERATION

A. Establishing Connection Between the Mouse and Receiver (Cordless models only): To allow communication between the mouse and receiver, follow these steps before attempting to use your cordless mouse:

Setting the Channels:

Fellowes Cordless Mice provide multiple Channels for users to select. To set the channel:

- Press the Channel Search Button on the top/front of the receiver, and note the index LED will blink slowly.
- Press the Channel Change Button on the bottom of the mouse to set a new channel. The index LED will blink at a faster rate for a few seconds when an identical channel is located.
- Press the right- or left-click buttons or move the mouse to confirm matched channels. The index LED on the receiver will blink when the mouse is moved or buttons are pressed.

5 FELLOWES EASYPOINT SOFTWARE

Your EasyPoint software includes features for making button assignments, controlling cursor movements, and setting up the mouse in Windows. To access the EasyPoint software, double click the mouse icon on the Windows Taskbar.

Mouse icon as it appears in the Windows Taskbar



You can also access the EasyPoint software by clicking the **Start** button, point to **Programs**, and then click **Fellowes**.

6 TROUBLESHOOTING

The mouse will not work after installation or is not detected:

- Check all connections to be sure they are secured to the correct ports, and then restart the computer.
- Un-install the Fellowes EasyPoint software using the “Add/Remove” program found in the Control Panel. Restart your PC. Then reinstall the Fellowes EasyPoint software.
- Remove any 3rd party mouse drivers. Then reinstall the Fellowes EasyPoint software.

(PS/2 Mode Only):

- If using a PS/2 mouse, make sure the PS/2 mouse port has the proper configuration. Refer to your computer documentation for the correct port configuration. You may also have other system devices that conflict with the mouse. Check the IRQ/address settings of these devices for conflicts and change the settings as required.
- If using a PS/2 mouse, make sure that the BIOS setting on the connect port of your computer shows Enable. Refer to your computer documentation for the correct port configuration.

(Cordless Models Only):

- See Section 4-A to ensure a proper connection was established between the mouse and receiver.
- Make sure the On/Off switch on the bottom of the mouse (select models only) is switched to on.

The screen cursor does not track well or the cursor does not move:

- The optical sensor on the mouse will not function on a highly reflective surface such as glass, a mirror or some black surfaces. It will not function properly on refractive mouse pads that have a prismatic surface. Hence, the surface of your desktop may be interfering with the performance of the input device. utilize a traditional mouse pad or use the mouse on a different surface.

(Cordless Models Only):

- Make sure the receiver is placed as close to the mouse as possible. Objects such as computer monitors, metal cabinets and other devices operating at the same frequency can interfere with this product. If you can see the LED on the receiver, you should be able to see it blink when the mouse is moved or a button is pressed. This feature should help to determine the correct location for your environment.
- Check to make sure you are using fresh batteries.
- Change the Channel ID the device is using by following the instructions contained in Section 4-A.

The cursor moves uncontrollably around the screen, causing files to open and other unexplained occurrences:

- There is a conflict with the drivers and/or devices. Please remove all other drivers or devices until the problem is resolved.
- If available, use the other port type (USB or PS/2) to resolve the conflict.

7 FELLOWES TECHNICAL SUPPORT

Our technical support representatives are readily available to help you with your problems. We will do our best to resolve the issue, or we will offer you full support in your decision to obtain a refund (please keep a copy of your dated sales receipt as proof of purchase). For technical support call 00800 1810 1810 or email at: feltech@fellowes.com.

8 SOFTWARE LICENSE AGREEMENT

The enclosed software is being licensed to the original purchaser only on the condition that all of the terms contained in this license agreement are accepted. This is a legal agreement between the original purchaser and by opening the product package the purchaser agrees to be bound by the terms and conditions of the agreement. If these terms are not accepted, promptly return the software and all other items that are part of this product in their original package with the original receipt to the point of purchase for a full refund.

Fellowes and its suppliers offer a nonexclusive license for use of one (1) copy of the enclosed software package ("Fellowes EasyPoint Driver") on one (1) computer only with the Fellowes optical mouse you have purchased. You may make one (1) copy of the software for backup purposes only; this copy must be labeled with all copyright and other notices included on the software as supplied by Fellowes. Installation onto a network server for the purpose of internal distribution of the software is permitted only if each user has purchased an individual software package for each computer to which the software is distributed.

Fellowes Inc. and its suppliers retain ownership of all software rights. User shall not decompile, disassemble or modify the software in any way. User may not transfer the software using any means (except as expressly permitted above). User may not transfer the software or Fellowes input product except upon permanent transfer, provided user does not retain a copy of the software, and provided transferee agrees to be bound by the terms and conditions of this license. Upon any violation of any of the provisions in this agreement, rights to use the software shall terminate and all copies shall be returned to Fellowes.

9 FEDERAL COMMUNICATIONS COMMISSION (FCC) NOTICE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installations, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient / Relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

10 BATTERY INFORMATION

General Precautions

- Keep batteries out of reach of children.
- Do not mix old and new batteries of different types. (For example, rechargeable and alkaline batteries)
- Always remove old, weak, or worn-out batteries promptly and recycle or dispose of them in accordance with your local ordinances.
- If a battery leaks, remove all batteries and recycle or dispose of them in accordance with your local ordinances and the battery manufacturer's instructions. Before inserting new batteries, thoroughly clean the battery compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately.
- Remove the batteries if your device is to be stored for longer than a month without being used.
- Do not over discharge the batteries.
- If the performance of the batteries decreases substantially, it is time to replace the batteries.

Special Precautions

The precautions below are to prevent the sudden release of electrolytes, which these prohibited actions can cause:

- Do not open, puncture, or mutilate the batteries.
- Do not heat batteries.
- Do not use fire to dispose of batteries.

Released battery electrolyte is corrosive, can cause damage to the eyes and skin and may be toxic if swallowed.

11 DISCLAIMER

The following does not apply to any country where such provisions are inconsistent with the local law:

Fellowes Inc. makes no warranties with respect to this documentation, whether expressed or implied. All material is provided "as is". This includes, but is not limited to, any implied warranties of merchantability and fitness for a particular purpose. The information covered in this document is subject to change without notice. Fellowes Inc. assumes no responsibility for any errors that may appear in this document.

All brand names mentioned in this manual are trademarks or registered trademarks of their respective companies.

Copyright 2005 Fellowes Inc. All rights reserved.

Hereby, Fellowes Inc., declares that this mouse is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



Technical documentation as required is kept at the following address:

Company: Fellowes Europe
Address: Yorkshire Way West Moor Park
Country: Doncaster, South Yorkshire, United Kingdom
Telephone No.: 44-1302-885-331
Fax No.: 44-1302-836-999

12 LIMITED WARRANTY

Fellowes Inc. warrants this optical mouse to be free from defects in material and workmanship for a period of three years from the date of purchase by the original consumer. If any part is found to be defective during the warrant period, your sole and exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part.

This warranty does not apply in cases of abuse, mishandling or unauthorized repair. ANY IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. In no event shall Fellowes be liable for any consequential or incidental damages attributable to this product. This warranty gives you specific legal rights. You may have other legal rights which vary from state to state.

To obtain service under this warranty on products purchased in the USA, return the machine prepaid to the address found in this manual. Please allow two weeks for processing.

Return with product:

- Copy of original sales receipt.
- A card stating your name, address, daytime telephone number, product model and serial number, plus a brief description of the problem.

For specific instructions on obtaining service under this warranty on products purchased outside the USA, contact the appropriate office listed on the back of this Manual.

Warrantor: Fellowes Inc.

NOTES: